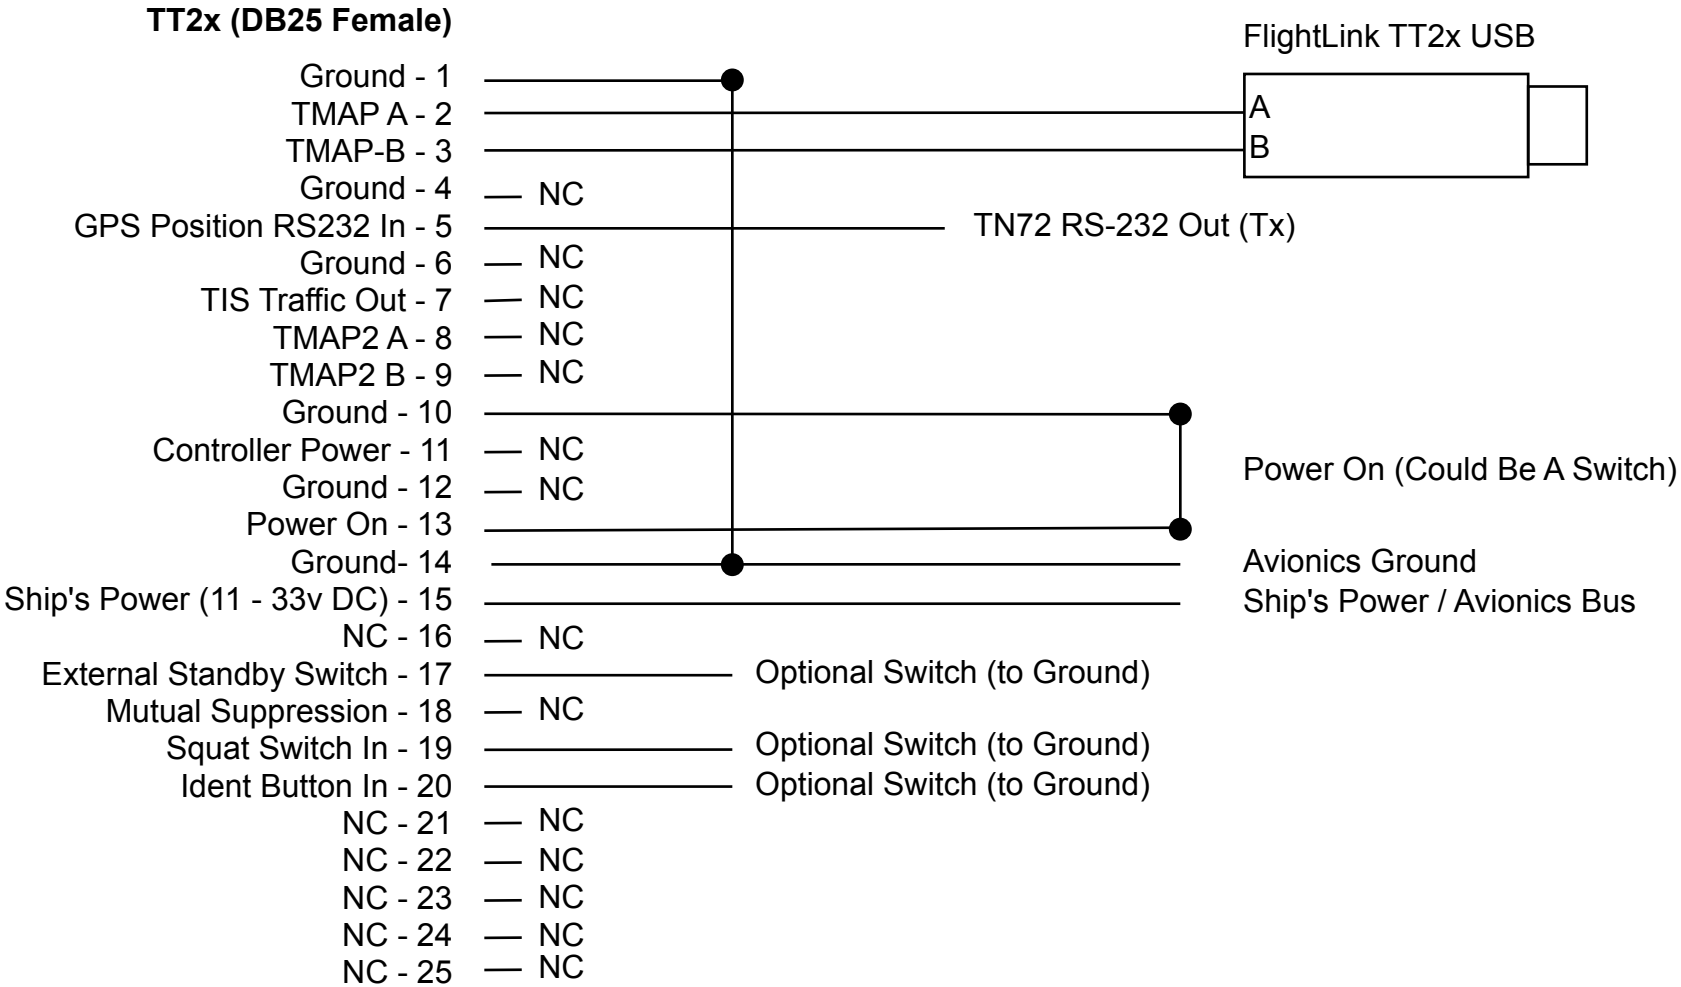
TT2x (DB25 Female)
Ground - 1
TMAP A - 2
TMAP-B - 3
Ground - 4
GPS Position RS232 In - 5
Ground - 6
TIS Traffic Out - 7
TMAP2 A - 8
TMAP2 B - 9
Ground - 10
Controller Power - 11
Ground - 12
Power On - 13
Ground- 14
Ship's Power (11 - 33v DC) - 15
NC - 16
External Standby Switch - 17
Mutual Suppression - 18
Squat Switch In - 19
Ident Button In - 20
NC - 21
NC - 22
NC - 23
NC - 24
NC - 25
NC
FlightLink TT2x USB
A
B
TN72 RS-232 Out (Tx)
Power On (Could Be A Switch)
Avionics Ground
Ship's Power / Avionics Bus
Optional Switch (to Ground)
Optional Switch (to Ground)
Optional Switch (to Ground)